



LE.3k

Operation Manual



Contents subject to change without notice

Version 01.02

LE.3k OPERATIONS MANUAL E 05082019

Ce manuel est disponible en français à www.kilotech.com

Table of contents

Table of contents	2
Introduction	3
General Precautions	4
Specifications	5
Unpack and Setup	6
Contents	6
Display and Keypad	7
Faceplate.....	7
Symbols on the Display	7
Keypad.....	8
Fast Program Mode.....	9
Weighing Operations	10
Key Functions	10
PLU Programming	11
How to program a PLU:	12
Speed Key Programming	15
Barcodes	16
Backup All Data to USB Flash Disk	17
Factory Restore	17
Changing the Price of the PLU on the Scale	18
Label Formats and Barcodes	19 -21
Print Adjust	22
Set Time and Date	23
Select Active PLU Fields	23
Error Codes	24
Firmware Update	25
Spec Setting: User Mode	26
Display Character Reference	27
Troubleshooting	28
Notes	29

Introduction

Thank you for choosing a Kilotech Scale. We appreciate your business and hope that you will enjoy using your scale. Should you require support, we have a range of video's available on Kilotech academy or you can contact your local dealer from whom you have purchased. Happy Weighing!

General Precautions


Avoid lengthy exposure to heat or cold.	Allow the scale to acclimate to normal room temperature before use.
Allow sufficient warm up time.	Turn the scale on and wait for a few minutes to allow the internal components a chance to stabilize before weighing.
Do not leave a load or weight on a scale for a prolonged period of time.	
Do not tamper with the scale yourself.	This will void the warranty. Contact your local distributor to properly repair your scale.
Do not disassemble the scale yourself.	This will void the warranty. Contact your local distributor to properly repair your scale.
Do not load beyond max cap the maximum weight limit.	
Do not pull the plug by its cord when unplugging.	
Do not use the scale near fire or corrosive gas.	
Avoid contact with water and DO NOT immerse the scale in water.	
Avoid placing the scale near a heater.	It could cause a fluctuation to the indicator reading.
Always make sure to use a Kilotech approved adapter.	
Do not drop the scale or apply a sudden shock.	
Do not drag the scale.	
Avoid exposing to other electromagnetic devices.	These devices emit RF and can cause unstable readings. If your scale should perform poorly, try moving the scale to a different room or location.
Level the scale or make sure it is on an even surface.	A scale used on an uneven surface may provide an unstable reading.
Scale should be used within stated temperature & humidity limits.	

Specifications

Product Number	851340 / 881340
Product Name	Integrator LE.3k
Capacity	30kg / 60lb
Graduation	0-15kg:5g/15-30kg:10g 0-30lb: 0.01lb/30-60lb:0.02lb
Weighing Modes	kg, lb
Display	Display Pole mounted, window displays including 4 LED screens and a dot matrix text screen for PLU descriptions
Display Digits	Display Digit 4 digit Tare / 5 digit Weight / 6 digit Unit Price / 6 digit Total Price
Power	21 V DC, AC adaptor
Product Dimensions	43 cm x 48 cm x 51 cm / 17 x 19 x 20 "
Platter Size	15.5 x 10" / 39 x 25 cm
Operating Temperature / Humidity	0°C - 40°C / 50°F - 104°F <60% RH non condensing 15% -85% Relative humidity non condensing
Pricing Units	\$/kg , \$/100g, \$/lb, pcs
Unit price range	0.00 - 9999.99 \$/kg or \$/lb
Total price range	0-999.99\$ (limited by bar code)
USB , Ethernet, WIFI and Serial Port	Yes, USB is for data transfer only
PLU	Max PLU 6500 PLUs (maximum 875 characters per PLU)
Printer Barcode Formats	EAN 13, EAN 8, UPC A, UPC E, EA -128 C, Customized by Authorized Dealer: QR, ITF25, PDF 417, EAN -128, EAN 28 char mode. As well, 20 preprogrammed barcodes
Printer	Direct Thermal Print
Image Formats	Maximum 15 images compatible with all common image files: BMP, JPEG, TFT, etc. Customized by Authorized Dealer
Speed Keys	126 with shift key, 63 without shift key
Label Formats	12 Preformatted , 3 sizes gap labels, 1 label for Nutritional Facts Canada, 1 label for Nutritional Facts USA. Labels are bilingual. Many more size options available for customized labels Programmed by your Authorized Dealer
Measurement Canada and NTEP approval	AM-5818
Warranty	2 year

Unpack and Setup

- Remove the scale from the box and place it on a firm, level surface.
- Avoid locations with rapid temperature changes, excessive dust, moisture, air currents, vibrations, electromagnetic fields, heat or direct sunlight.
- Adjust the leveling feet until the bubble is centered in the circle of the level indicator (located under the platter on the left hand side of the scale)
- NOTE: Ensure that the scale is level each time its location is changed.
- Connect the supplied AC adapter to the power input receptacle underneath the scale. Plug the AC adapter into a power outlet,
- If the scale will be stored or transported in the future, save the packaging material to ensure the best possible protection for the scale.

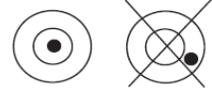

Contents

- Scale
- Adaptor
- This Manual

Display and Keypad

Faceplate



Symbols on the Display

TARE Weight display window

- **Zero** Centre-of-zero annunciator
- **Stable** Scale stable annunciator

Weight/Pcs Weight /Pieces display window

- **Net** Net weight annunciator
- **PC(s)** Pieces mode annunciator
- **lb/kg** Unit price per kg/lb annunciator


Unit price / Prix unitaire Unit price display window

- **Prog** Program mode annunciator
- **Account** Account mode annunciator
- **\$/100g, \$/lb, \$/kg** Pricing mode annunciator

TOTAL PRICE(\$) **Prix total** - Total price display window

- **Pre-pack** Pre-pack mode annunciator
- **Save** Save mode annunciator
- **Auto print** Auto print mode annunciator
- **Batch Print** Batch print mode annunciator

Keypad

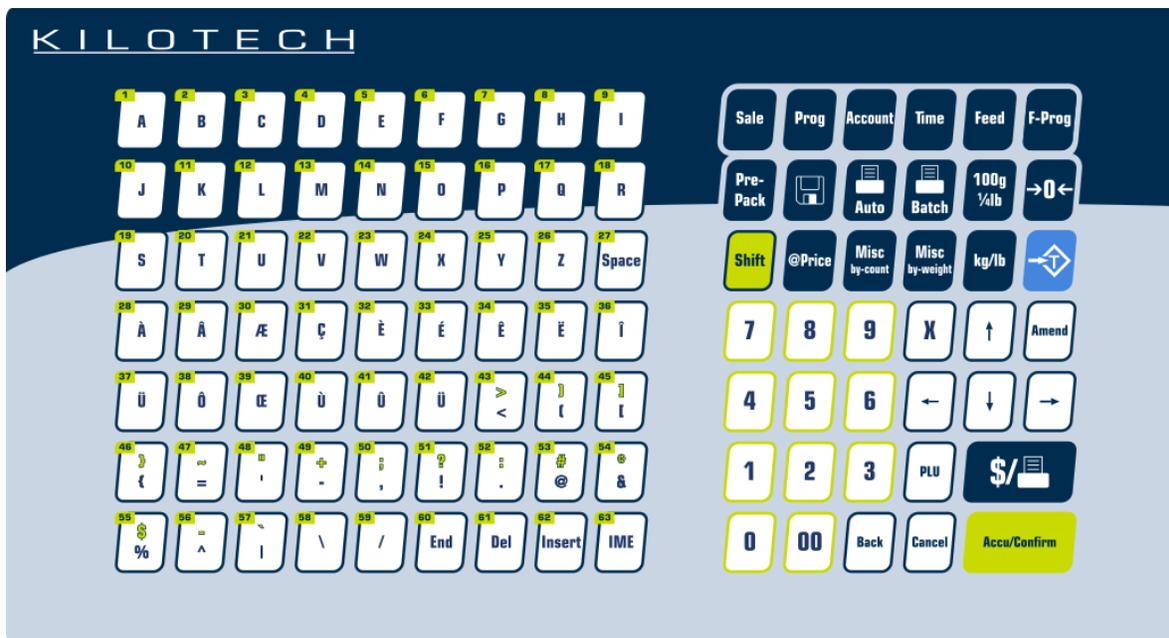

	Enter sale mode		Enter program mode
	Enter accounting mode		Display current date and time
	Feed a label and clear printer buffer		Fast program mode. Always used in combination with other keys
	Switch between sales modes		
	Switch between pricing units		Set the scale to zero
	Access second level speed keys and change case sensitivity during text input		Override the unit price
	Miscellaneous by count transaction		Miscellaneous by weight transaction
	Tare the scale		Input count: amount in count sale
	Amend transaction data in sale interface and store amended data in the program interface		Switch among sequential steps and numbers in the program and account interfaces
	When you type a PLU number and press this key, it will call up that PLU		Print labels or receipts according to settings
	Return to previous step without saving		Clear data, cancel operations or go back to previous step
	Save accumulative transaction data into sale buffer		

Fast Program Mode

Press both key simultaneously.

 +  ~  : Used to program the selected speed key

 +  : Used to enter PLU program mode

 +  : Used to enter the spec setting mode

Weighing Operations

Key Functions



Zero

The zero key is used to zero out the small difference on the weight display.
The scale will display “Err” when the weight to be zeroed is outside the range.
If a tare is set, the ZERO key function is not available.



Tare

Weight tare: Place the receptacle (box, bowl etc...) on the scale, and when the reading is stable, press tare key to tare the weight.

Key tare: Key in known tare weight and press tare key.

To clear Zero or Tare, press their respective buttons.

The tare weight and unit price will be auto cleared after transaction is completed and item has been removed from the platter.



Save

When activated, this function will prevent auto clearing of the unit price or tare-weight.

When active, the save indicator is activated.




Units key

Use the key to shift between “kg”, “lb”. Note: Unit price will be set to zero during switching

You cannot switch units when a tare is active.

PLU Programming

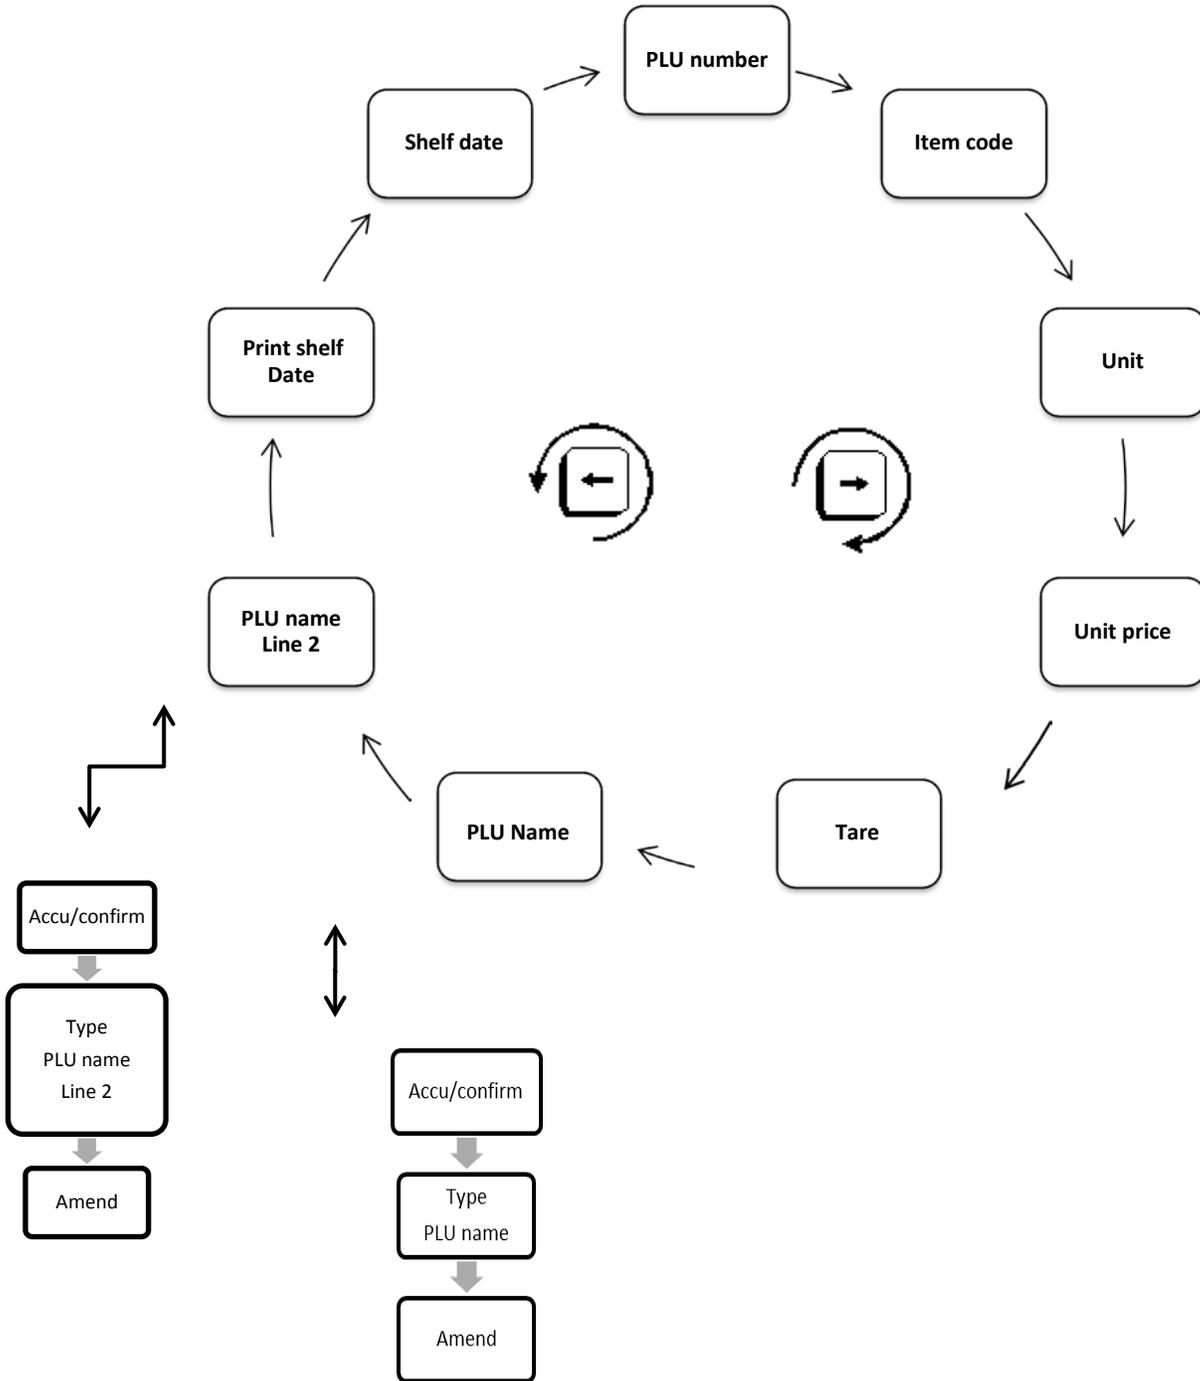

To program a PLU with the F-program press the F-prog and PLU button You can press the right and left arrow keys to navigate up and down the PLU program menu, but you must provide a PLU number. Every PLU has 37 data fields. Many of the fields have been hidden by default. See “Select active PLU fields” for more details.

At any time, you may press the AMEND key to save or press CANCEL and return to the beginning of menu. To exit programming mode, press the SALE key.

How to program a PLU:

Press the **F-prog** and **PLU** key simultaneously



Select **PLU number** to be programmed and press right arrow key



Enter **Item code** and press right arrow key



Enter **weight unit code** and press right arrow key



Available unit codes are:

2: \$/pcs

3: \$/kg

6: \$/lb

8: \$/100g

9: \$//¼lb (USA only)

Enter **unit price** and press right arrow key



Enter **cost** and press right arrow key




Enter **tare weight** and press right arrow key



To program the **PLU name** press the
Accu/Confirm key or press
the right arrow key to skip



Program **PLU name** and press Amend
and right arrow key when finished

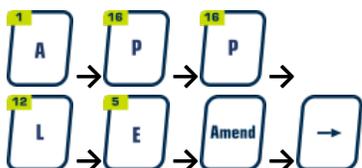


To program the **second line of the PLU name**
Press the Accu/Confirm key
(Behavior is the same as the PLU name field)
Or press right arrow key to skip



Program **Secondary PLU name** and press

Amend and then right arrow key when finished

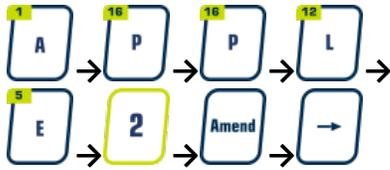

Program **best before date**

0: Do not print

1: print




Program **Nutritional facts table** number

Press amend to save edited PLU
and return to the beginning of the
PLU editing screen



(leave at 0 when not in use)

Speed Key Programming

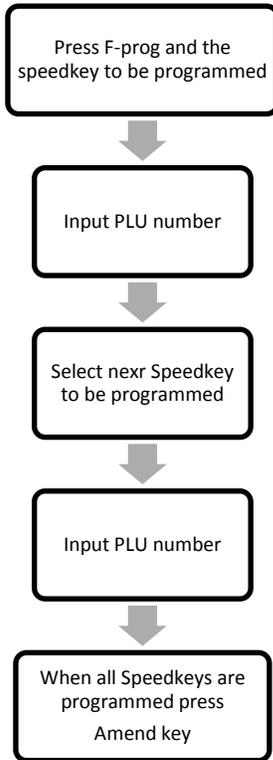

NB: To access the second level, press the shift key prior to selecting the speed key



Select **PLU number to be linked to the speed key** and select the next speed key.




Press Amend to save and return to normal mode.




Barcodes:

The LE.3k has predefined barcodes. To select a global barcode please do the following:

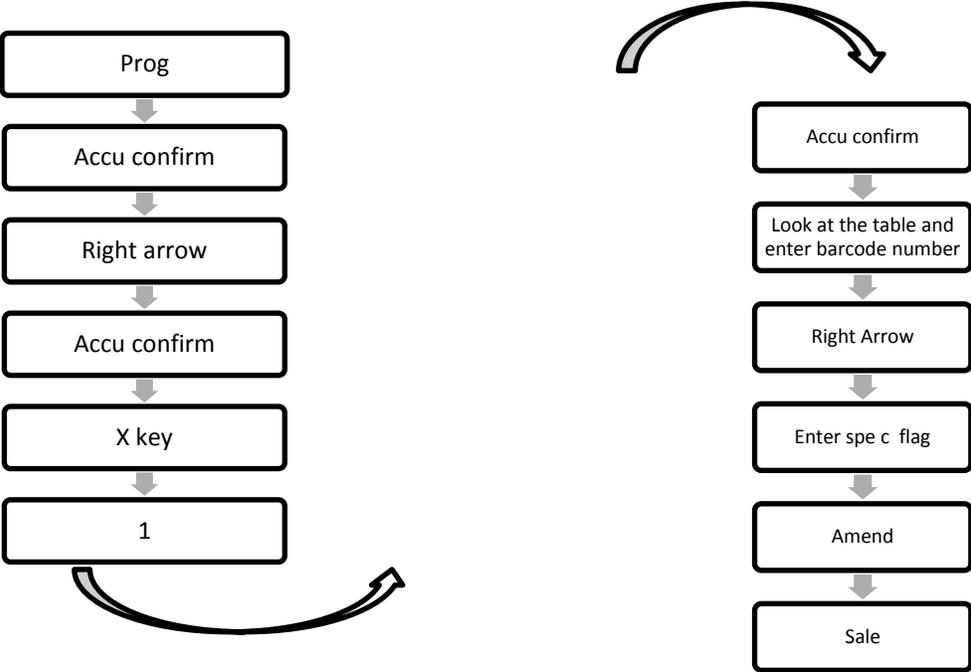


Backup All Data to USB Flash Disk

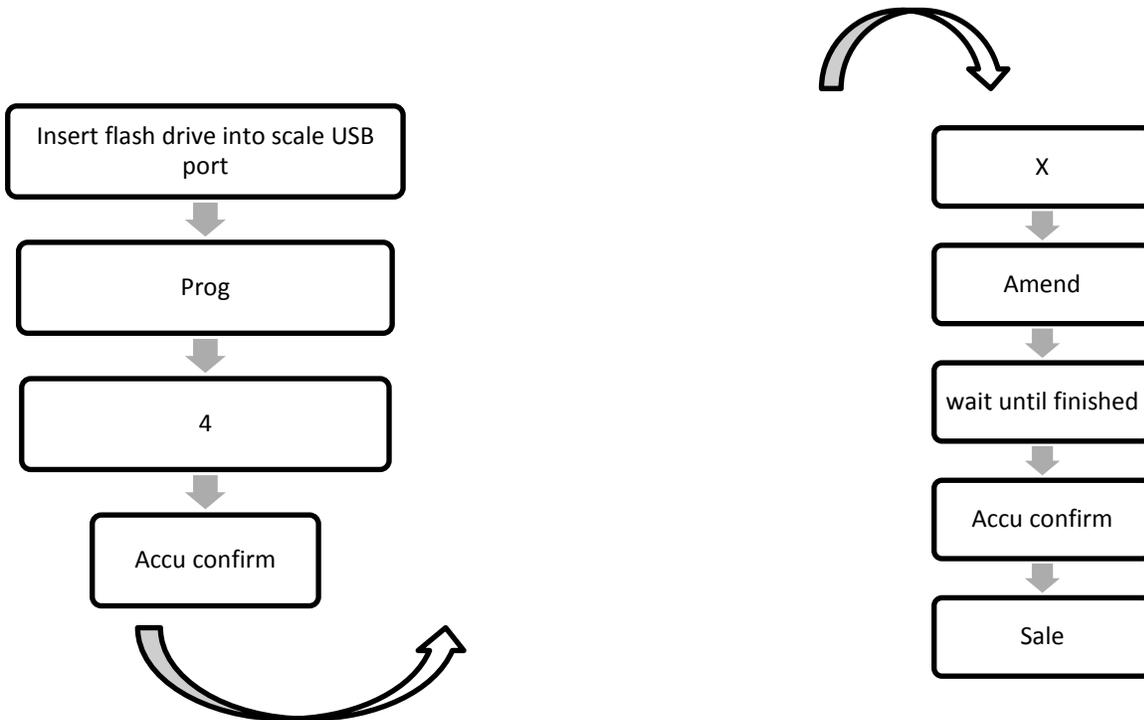


Note 1 Exporting data to files to USB flash drive can sometimes take a lot of time.

Note 2 Press any key to exit once completed. Press the cancel key to abort .

Factory Restore

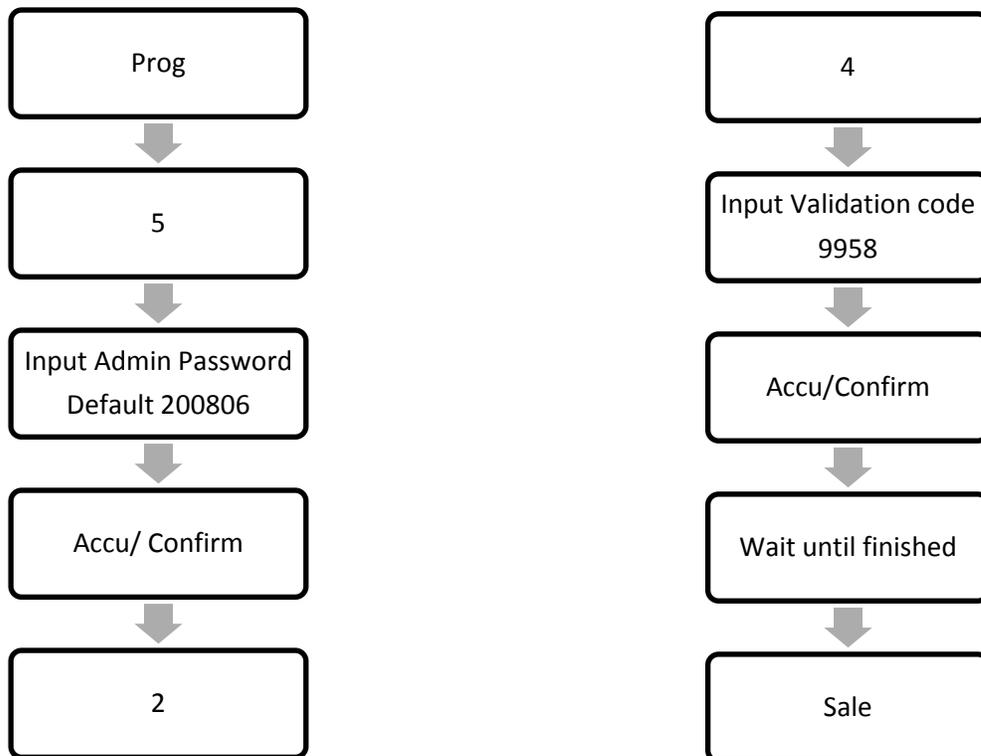


Changing the Price of the PLU on the Scale

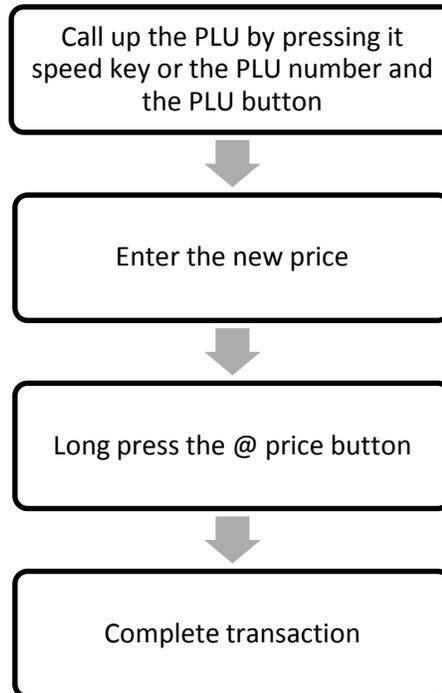

Label Formats

The LE.3k has multiple predefined labels barcodes. To choose a label format please do the following:

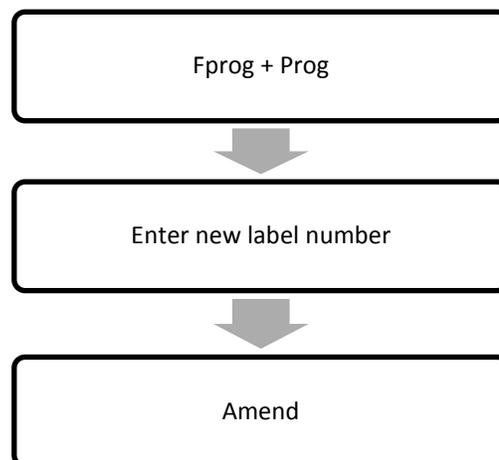

Labels

Commodity Line 1

Ingredients TEXT1AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:
 Ingredients TEXT2AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:
 Ingredients TEXT3AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:

Emballé le: Meilleur Avant:
 OC-18-18 OC-18-18



Price: Poids:
 8.99 \$ / kg 1.000 kg

8.99
 Total \$

Store Name Line 1
 Store Name Line 2
 Store Name Line 3

11

Commodity Line 1

Ingredients TEXT1AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:
 Ingredients TEXT2AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:
 Ingredients TEXT3AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:

Packed on: Best Before:
 OC-18-18 OC-18-18



Price: Weight:
 8.99 \$ / kg 1.000 kg

8.99
 Total \$

Store Name Line 1
 Store Name Line 2
 Store Name Line 3

12

Commodity Line 1

Ingredients TEXT1AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:
 Ingredients TEXT2AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:
 Ingredients TEXT3AbcdeFghijKlmnoPqrstuvwxyZ123456789
 012345678112345678912345678912345678912345678901
 2AbcAbcdefGhijklmnoPqrstuvwxyZ12345678901234567890
 123456123456789123456789123456789123456789123456
 789012AbcAbcdeFghijKLMNOPQRSTUvwXyZ12345678901:

Packed on: Best Before:
 Emballé le: Meilleur avant:
 OC-18-18 OC-18-18



Price/Prix: Weight/Poids:
 8.99 \$ / kg 1.000 kg

8.99
 Total \$

Store Name Line 1
 Store Name Line 2
 Store Name Line 3

13

Nutrition Facts Valeur nutritive

Per 1 / Pour Cup	% Daily Value
Amount / Teneur	% valeur quotidienne
Calories / Calories 350	
Fat / Lipides 2.0 g	3 %
Saturated / Saturés 2.0 g	20 %
+ Trans / Trans 2.0 g	
Cholesterol / Cholestérol 10 mg	
Sodium / Sodium 150 mg	7 %
Carbohydrate / Glucides 23 g	8 %
Fiber / Fibres 1 g	4 %
Sugars / Sucres 16 g	
Protein / Protéines 1 g	
Vitamin A / Vitamine A	8 %
Vitamin C / Vitamine C	10 %
Calcium / Calcium	4 %
Iron / Fer	4 %
Potassium / Potassium 300 mg	7 %

NFT
 Canada
 10

Nutrition Facts

Cup Servings Per Container	
Serving Size 1	
Amount Per Serving	
Calories 350	
	% Daily Value*
Total Fat 2.0g	3%
Saturated Fat 2.0g	10%
Trans Fat 2.0g	
Cholesterol 10mg	3%
Sodium 150mg	6%
Total Carbohydrate 23g	8%
Dietary Fiber 1g	4%
Total Sugars 16g	
Includes 12g Added Sugars	24%
Protein 1g	
Vitamin D 20mcg	4%
Calcium 20mg	2%
Iron 17mg	90%
Potassium 310mg	9%

*The % Daily Value(DV) tells you how much a nutrient in a serving of food contributes to a daily diet. 2,000 calories a day is used for general nutrition advice.

NFT
 USA
 10

Barcodes

Number	Format	Flag	Item Code	Price/Weight	Barcode digits												
					1	2	3	4	5	6	7	8	9	10	11	12	13
1	UPC-A	Flag= 1 Digit	Item Code= 5 Digits	Price= 5 Digits	F	I	I	I	I	I	P	P	P	P	P	C	
2	UPC-A	Flag= 1 Digit	Item Code= 5 Digits	Weight= 5 Digits	F	I	I	I	I	I	W	W	W	W	W	C	
3	UPC-A	Flag= 1 Digit	Item Code= 6 Digits	Price= 4 Digits	F	I	I	I	I	I	P	P	P	P	C		
4	UPC-A	Flag= 1 Digit	Item Code= 6 Digits	Weight= 4 Digits	F	I	I	I	I	I	W	W	W	W	C		
5	UPC-A	Flag= 2 Digit	Item Code= 5 Digits	Price= 4 Digits	F	F	I	I	I	I	P	P	P	P	C		
6	UPC-A	Flag= 2 Digit	Item Code= 5 Digits	Weight= 4 Digits	F	F	I	I	I	I	W	W	W	W	C		
7	EAN-13	Flag= 1 Digit	Item Code= 6 Digits	Price= 5 Digits	F	I	I	I	I	I	P	P	P	P	P	C	
8	EAN-13	Flag= 1 Digit	Item Code= 6 Digits	Weight= 5 Digits	F	I	I	I	I	I	W	W	W	W	W	C	
9	EAN-13	Flag= 1 Digit	Item Code= 7 Digits	Price= 4 Digits	F	I	I	I	I	I	I	P	P	P	P	C	
10	EAN-13	Flag= 1 Digit	Item Code= 7 Digits	Weight= 4 Digits	F	I	I	I	I	I	I	W	W	W	W	C	
11	EAN-13	Flag= 2 Digit	Item Code= 4 Digits	Price= 6 Digits	F	F	I	I	I	I	P	P	P	P	P	C	
12	EAN-13	Flag= 2 Digit	Item Code= 4 Digits	Weight= 6 Digits	F	F	I	I	I	I	W	W	W	W	W	C	
13	EAN-13	Flag= 2 Digit	Item Code= 5 Digits	Price= 5 Digits	F	F	I	I	I	I	P	P	P	P	P	C	
14	EAN-13	Flag= 2 Digit	Item Code= 5 Digits	Weight= 5 Digits	F	F	I	I	I	I	W	W	W	W	W	C	
15	EAN-13	Flag= 2 Digit	Item Code= 6 Digits	Price= 4 Digits	F	F	I	I	I	I	I	P	P	P	P	C	
16	EAN-13	Flag= 2 Digit	Item Code= 6 Digits	Weight= 4 Digits	F	F	I	I	I	I	I	W	W	W	W	C	
17	EAN-13	Flag= 2 Digit	Item Code= 5 Digits	Price= 4 Digits	F	F	I	I	I	I	I	S	P	P	P	C	
18	EAN-13	Flag= 2 Digit	Item Code= 4 Digits	Price= 5 Digits	F	F	I	I	I	I	S	P	P	P	P	C	
19	EAN-13	Flag= 2 Digit	Item Code= 5 Digits	Weight= 4 Digits	F	F	I	I	I	I	I	T	W	W	W	C	
20	EAN-13	Flag= 2 Digit	Item Code= 4 Digits	Weight= 5 Digits	F	F	I	I	I	I	T	W	W	W	W	C	
21	GTIN-14																

- F= Flag
- I= Item Code
- P= Price
- W= Weight
- C= Check Sum
- S= Check Sum for Price
- T= Check Sum for Weight

EAN-13 EXAMPLE



UPC-A EXAMPLE




Minimum Height
 For UPC-A 22.85mm
 For EAN-13 22.85mm
 For GTIN-14 31.75mm

GTIN-14
 (GS1-128 or ITF-14)



Print Adjust


To adjust the print height, please do the following:

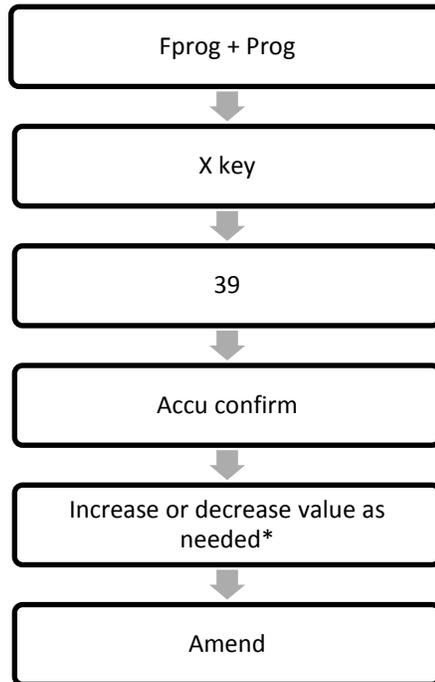

***1 increment = 1 pixel**
8 pixels = 1 mm


Set Time and Date

To adjust the date and time, please do the following:

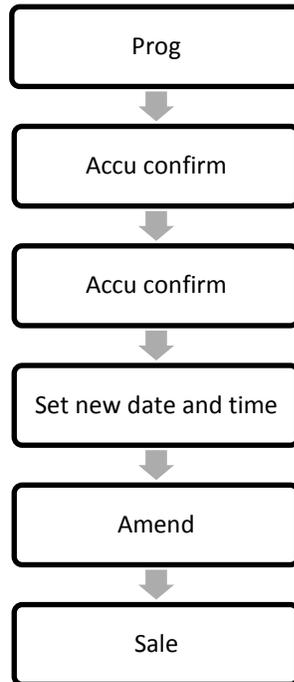

Select Active PLU Fields

To select the fields used for PLU programming, please do the following:

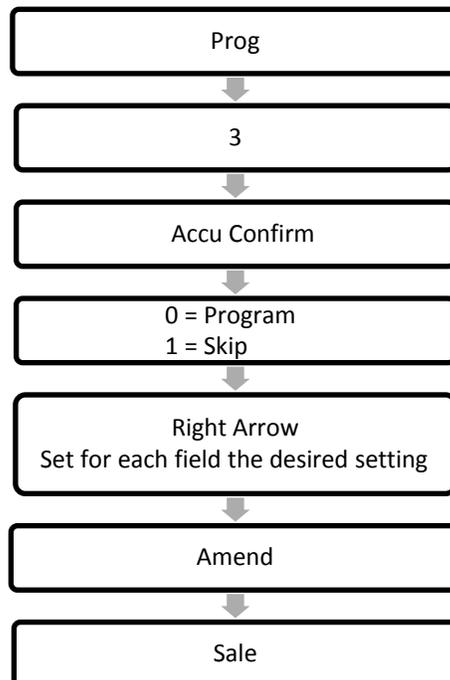

Available fields

PLU Number	Parent Class	Print User Date
Item Code	PLU Name	Print Pack date
PLU Index	PLU Name Line 2	User Date
Unit	Ingredients Line 1	Lower Discount
Unit price	Ingredients Line 2	Higher Discount
Cost	Ingredients Line 3	DAO Sort
Tare	Ingredients Line 4	Tax Sort
Print Format 1	Ingredients Line 5	Nutrition
Barcode1	Ingredients Line 6	Custom Number 2
Barcode Flag1	Print Sale Date	Custom Number 3
Print Format 2	Print Sale Time	Custom Number 4
Barcode 2	Print Pack Date	
Barcode Flag 2	Print Pack Time	


Error Codes

Err01:	The weight signal is too large.
Err02:	No proper data can be displayed.
Err03:	The weight signal is too small.
Err04:	Zero point is over the setting range.
Err05:	Zero point is below the setting range.
Err06:	Error in unit key operation.
Err10:	The EEPROM can't be accessed.
Err11:	The parameters are not matching with the backup data.
Err12:	The setting parameter(s) is not in normal range.
Err20:	There is an error in calibration.
Err30:	ADC is over max. range.
Err31:	ADC is below min. range.
Err40:	Recall error, no content stored.
CAP.:	Capacity.
UOL.:	Voltage.

St.PLU:	To set and store the indirect unit price.
ADDR. :	PLU address.
Unit:	Weighing units.
Rc.PLU:	Recall indirect unit price.
OUT.P.R:	Data is out of printed barcode range.
Data.ch:	Data has been changed.
Save:	Data is being saved.
O.RANGE:	The data has been entered or the weight for tare weight is out of range.

Firmware Update

To update the firmware of your scale do as follows:

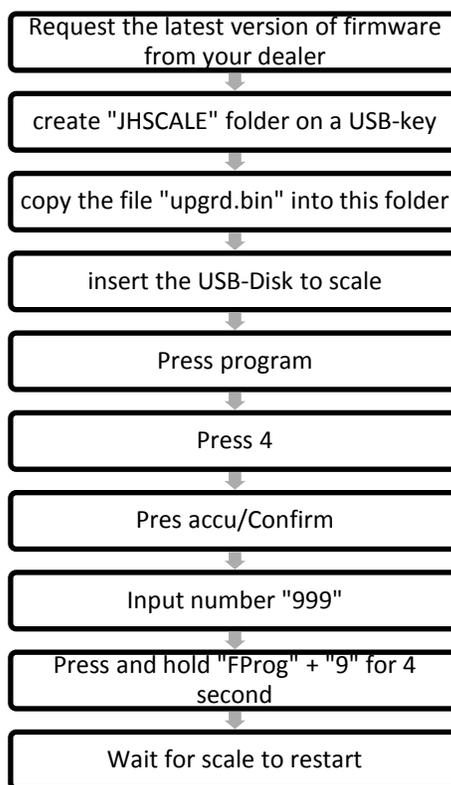

- **NB: Updating firmware will erase all data on the scale.**
- **Make sure the firmware is compatible with your scale**
- **Updating firmware is done at your own risk.**

Spec Setting: User Mode

SpecID	Description	Note
0	Label: Item Print Format	Print formats. 0 = no print, 1~xxxx = selected print format
1	Label: Item Barcode Format	Barcode formats. 0 = no print, 1~xxxx = selected barcode format
2	Label: Item Barcode Flag	Default 2
3	Label: Item Print Times	Default 1
4	Label: Item Print Reversed	0: Normal, 1: Print 180°Reversed
39	Gap Paper: Pre-feed Distance	Reverse feed if number > 1000
104	Date Type	0 :YYYY.MM.DD 1 :YY.MM.DD 2 :MM/DD/YY 3 :MM-DD-YY 4 :DD/MM/YY 5 :DD-MM-YY
106	Shelf Days	Number of days for global shelf life
192	Dot Matrix Screen: Idle Mode	0 :Display Time 4 :Store Name 5 :Device Name 8 :Label text 1 9 :Label text 2 10 :Label text 3 11 :Label text 4 12 :Label text 5 13 :Label text 6 14 :Label text 7 15 :Label text 8 21 21:Special text 6 22 :Special text 7 23 :Special text 8
193	Dot Matrix Screen: Idle Mode Source	0 :Display Accumulation 1 :Display AD-Message
256	Pre-Print Function	0 :Disable 1 :Enable
265	Date Print Mode:Month	0 :Digits 1 :Two Characters
266	Date Display Mode	0 :Default 1 1:Using Spec104 and 265
340	Dot matrix LCD's contrast(0~7)	
341	Dot matrix LCD's brightness(0~31)	

Display Character Reference

Symbol	7-segments digit								
0		C		O		(ï	
1		D		P)		ô	
2		E		Q				ù	
3		F		R		À		û	
4		G		S		Â		ü	
5		H		T		Æ			
6		I		U		Ç			
7		J		V		È			
8		K		W		É			
9		L		X		Ê			
A		M		Y		Ë			
B		N		Z		Ï			

Troubleshooting

Error code	Possible cause	Solution
E0.01	Scale is not stable at start-up	Make sure the tray is empty and stable
E0.02	Zero point signal is over or below the limitation	Make sure there are no goods on the platter and platter is correctly installed
E1.01	Programmed data is invalid	Input valid data again
E1.03	The selected print format does not exist	Set correct print format
E1.10	Sale at 0 price is forbidden	The price cannot be 0 Refer to Spec070
E1.11	Exceeds the largest sale price	Total price or grand total price exceeds the largest sale price
E1.12	Need to return to zero point	The weight must be at zero
E1.13	Exceeds accumulative limit	The accumulative times are greater than the buffer's accumulate limit
E1.14	Printer buffer overflow	Print the data in the buffer first then print this sale or switch to other buffers
E1.18	PLU is locked	The system needs to exit lock PLU (or auto mode) first
E1.21	Less than smallest sale weight	Weight needs to be larger than the smallest sale weight
E1.22	Larger than largest sale weight	Weight needs to be smaller than the largest sale weight
E1.23	Discounted Unit Price has to be less than the discount lower limit	Set Discount within allowed range, or amend the allowed range
E1.24	Discounted Unit Price has to be higher than the discount upper limit	Set Discount within allowed range, or amend the allowed range
E1.30	Cannot enter special sale mode	The selected PLU has a conflict with the special sale mode, select again
E7.01	Some keys are pressed when the scale starts	Check keyboard for obstruction
E7.01	The label has not been removed	Take away the printed label paper
E7.12	Print head is not closed tight	Install the paper and close the head
E7.13	Printer is not working	Please wait for a few seconds and try again
E7.15	Lack of gap paper	Reinstall the roll
E7.16	The scale cannot find the gap intervals	Reinstall the roll
E7.17	The scale cannot find gap alignment positions	Reinstall the roll
E7.18	The printer is overheated and it needs to cool down	Please wait a few seconds and try again
E7.19	There is no response from the printer	The printer may not be connected or in a state the printer could not print (Buffer overflow or error state)
E7.30	Alarm for full storage of deals records	Enter Account interface. Calculate and clear the reports

